




1. Enter the [Vehicle Remote] menu and select the corresponding available super remote to generate.

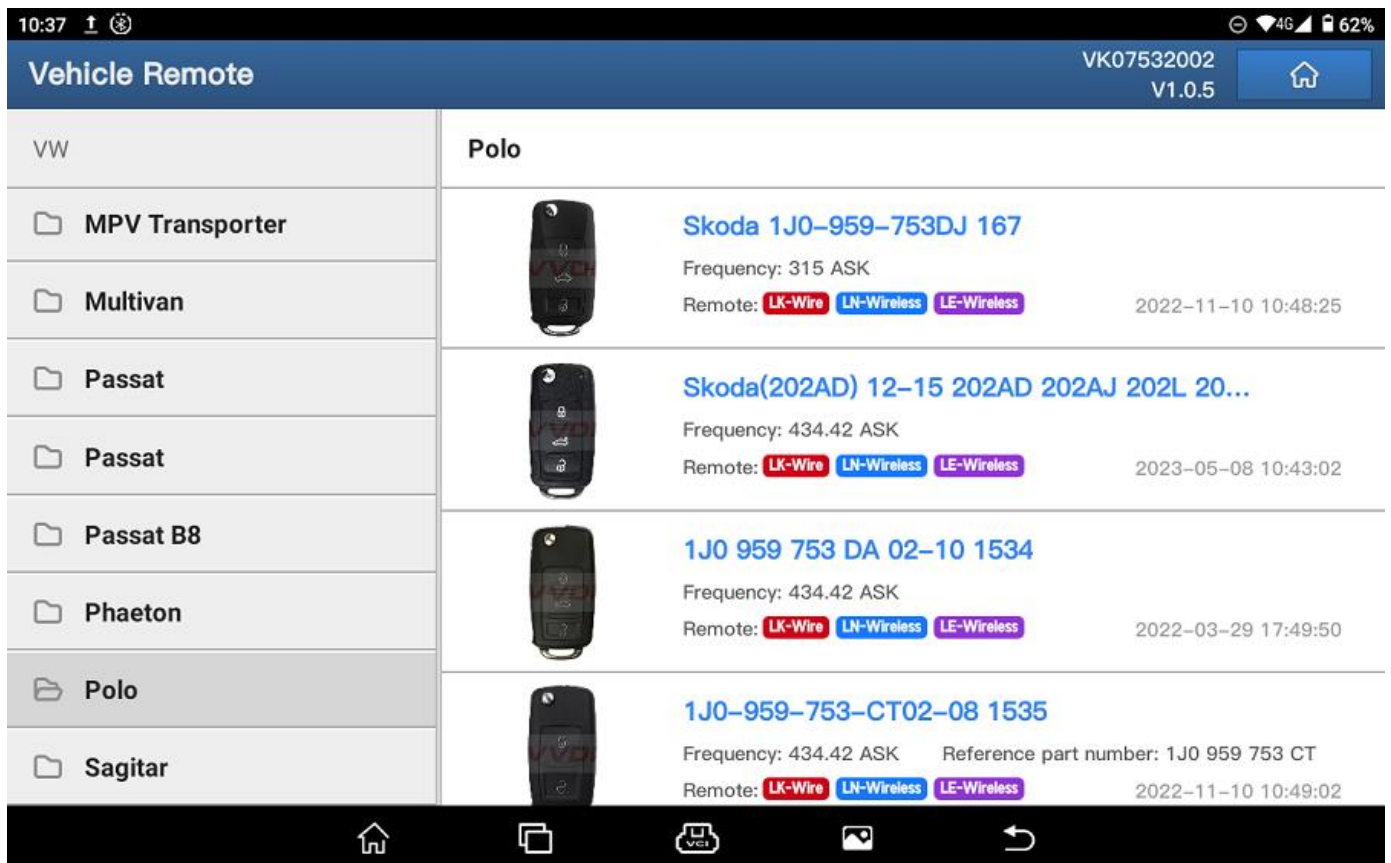

2. Select the corresponding key and place the super remote key in the key programmer to generate.

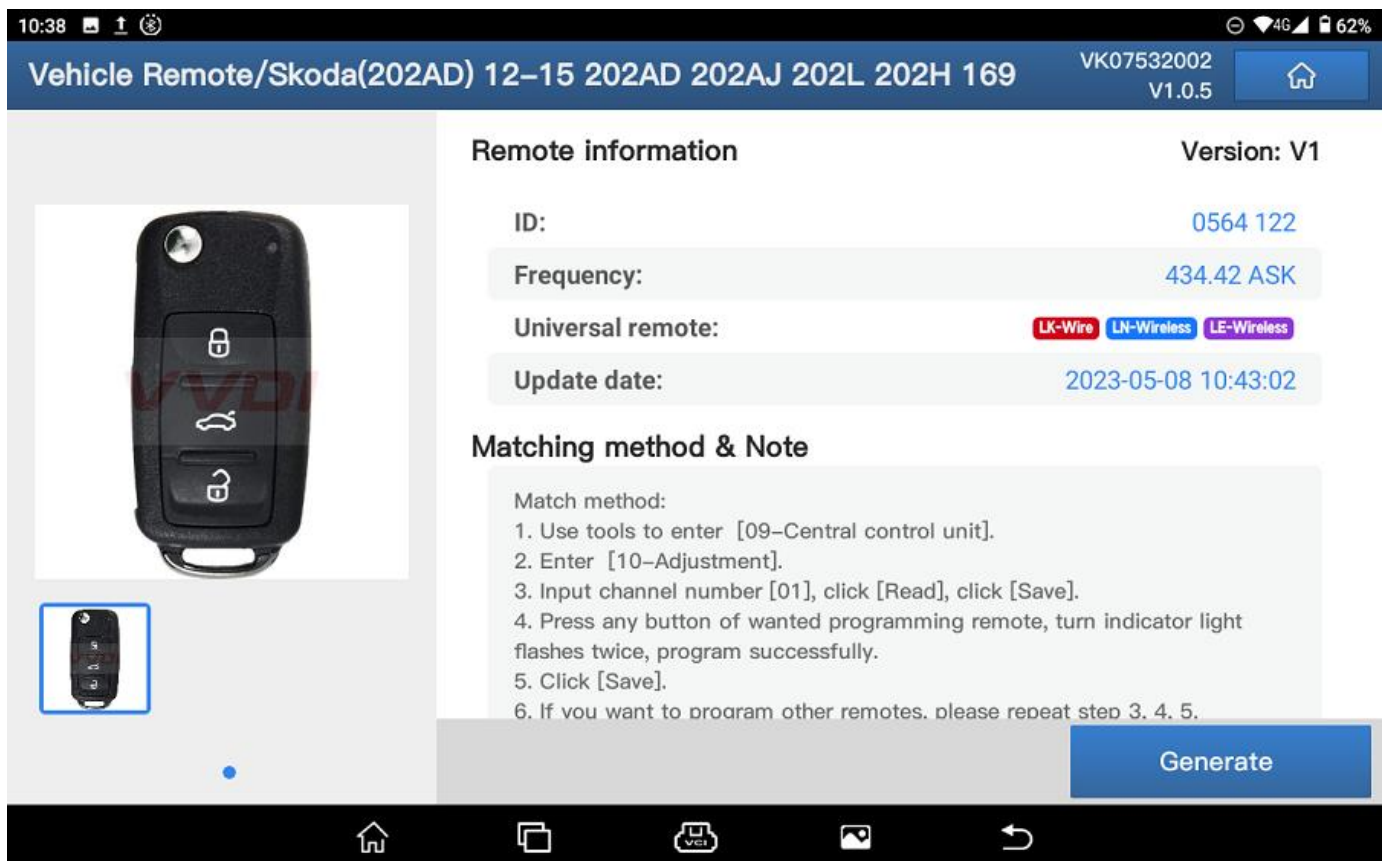

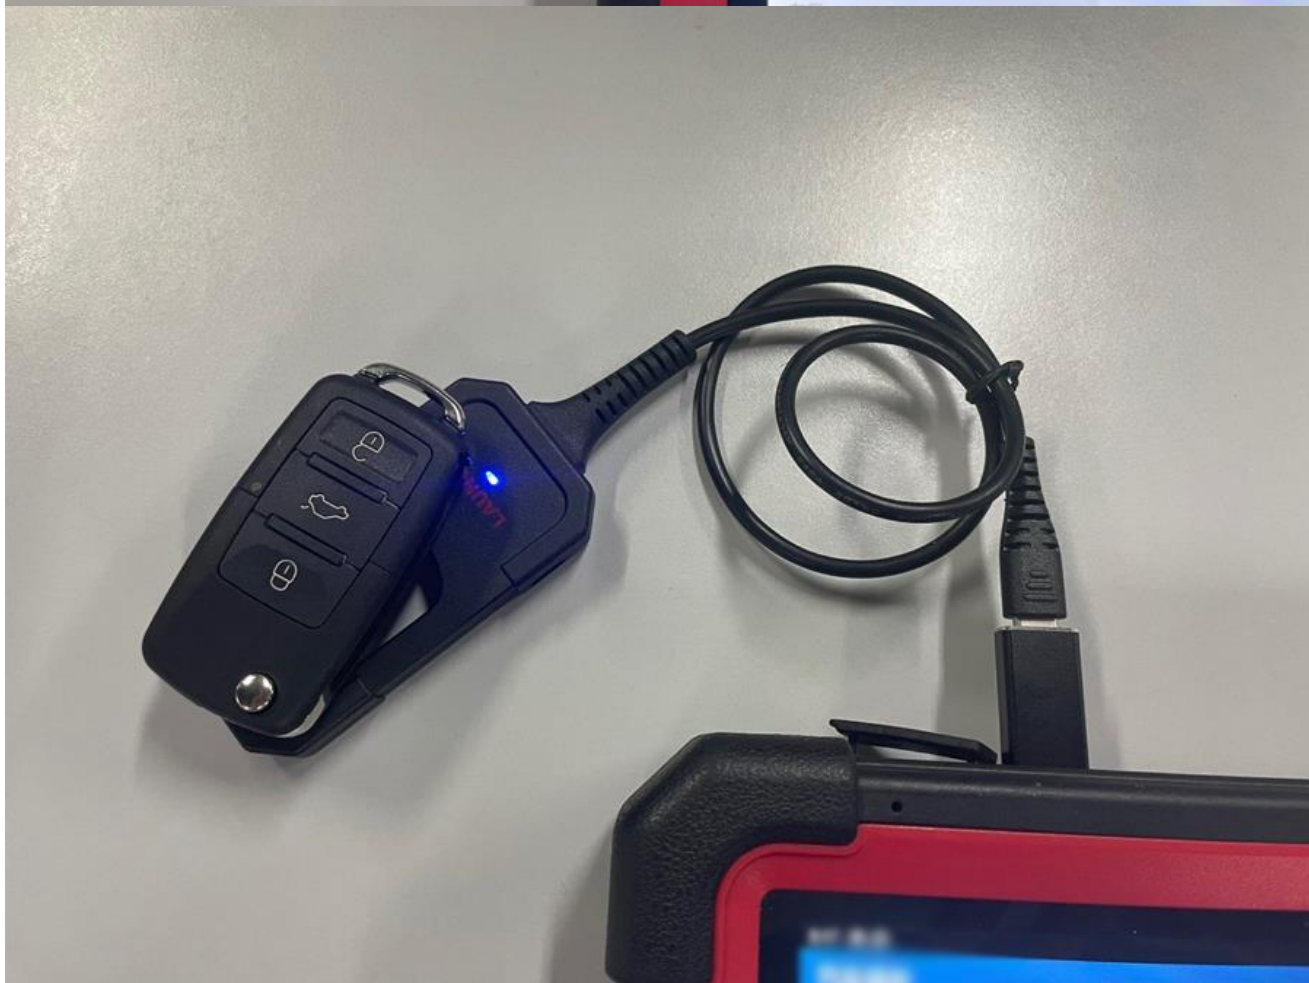

3. After the remote control is successfully generated, enter the [Set type of super chip] menu to generate the corresponding key chip.