


1. Enter the menu [Set type of super chip] to generate.

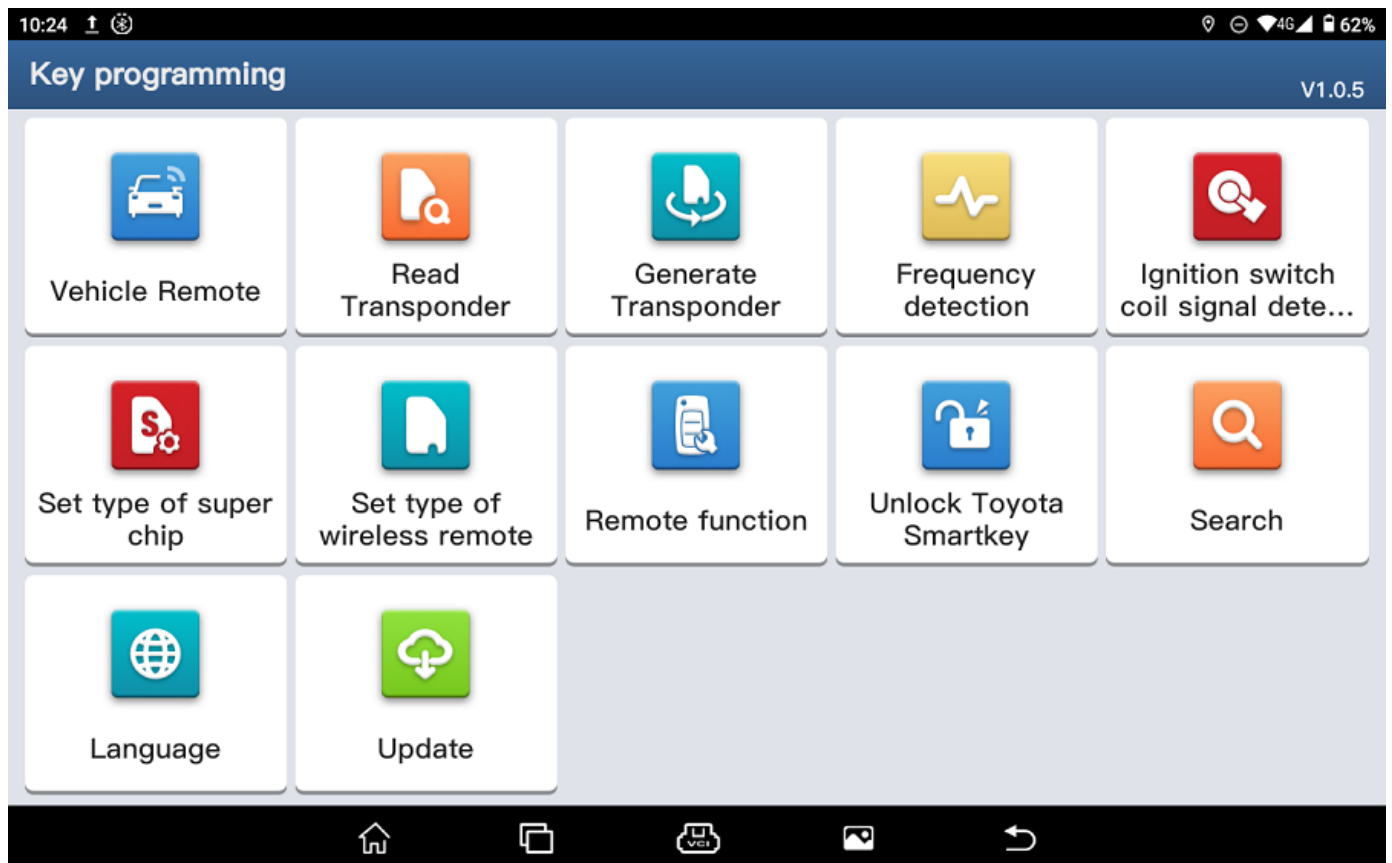

2. Select the corresponding key chip type and insert the super chip into the anti-theft induction coil.





3. Once successfully generated, it can be used.

